


Emergency Stop Button

Installation Instructions for ER5018, ER6022, ER1022, ER1032, XER6022, XER1022 and XER1032 Series Switches

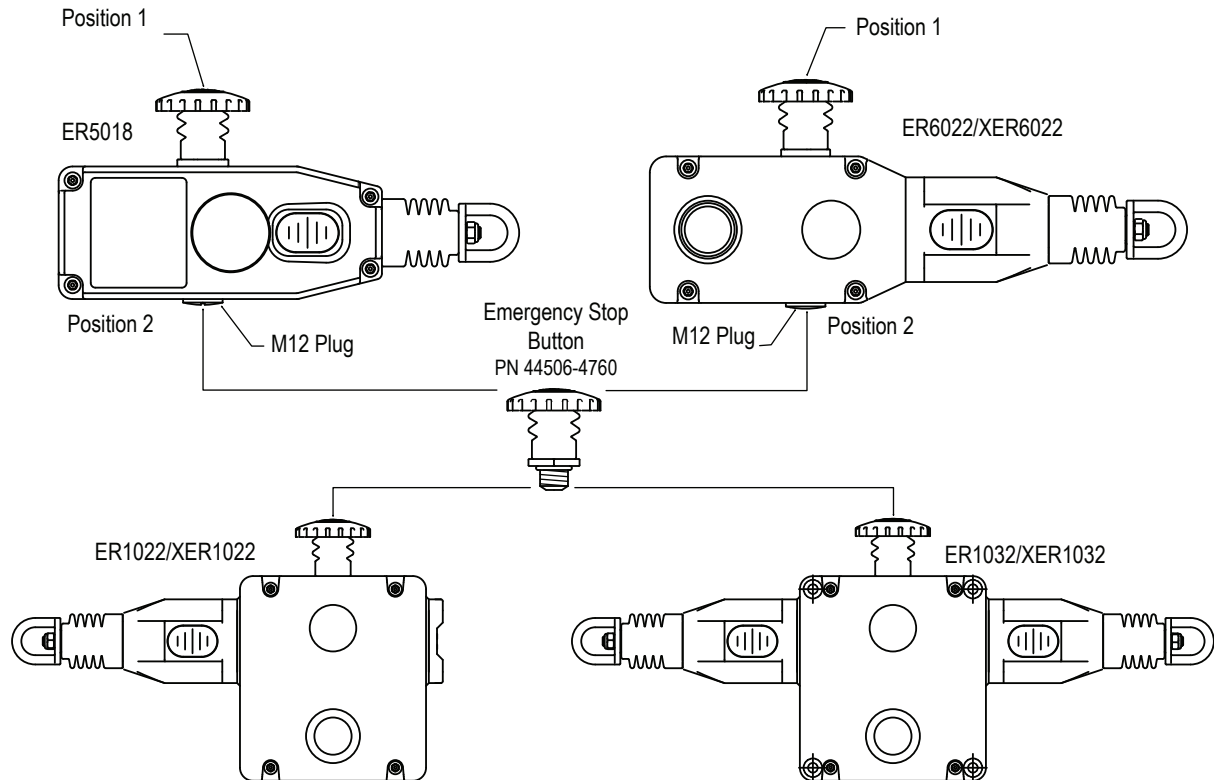

The ER-Series and XER-Series Rope Pull E-Stop Switches are designed to allow the Emergency Stop Button to be re-positioned, replaced, or added in the field. The ER5018, ER6022 and XER6022 have two positions in which the Emergency Stop Button may be mounted. Only one Emergency Stop Button may be installed per switch. The ER/XER1022 and ER/XER1032 have only one position to install the Emergency Stop Button.

To install the Emergency Stop Button complete the following steps:

1. Remove the M12 threaded plug from the mounting port.
2. Apply thread-lock solution to threads of E-Stop Button.
3. Insert the Emergency Stop Button PN 44506-4760 into the mounting port.
4. Tighten the Emergency Stop Button (torque 10 in. lb).
5. After installation of the Emergency Stop Button, reset and check to make sure that all safety circuits are working properly.

Note: The IP67 Enclosure Rating of the switch is dependant on the M12 plug and Emergency E-Stop Button being installed and torqued properly. Never leave the M12 port unplugged.

OMRON AUTOMATION AND SAFETY • THE AMERICAS HEADQUARTERS • Chicago, IL USA • 847.843.7900 • 800.556.6766 • www.omron247.com

OMRON CANADA, INC. • HEAD OFFICE

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • www.omron247.com

OMRON ELECTRONICS DE MEXICO • HEAD OFFICE

México DF • 52.55.59.01.43.00 • 01-800-226-6766 • mela@omron.com

OMRON ELECTRONICS DE MEXICO • SALES OFFICE

Apodaca, N.L. • 52.81.11.56.99.20 • 01-800-226-6766 • mela@omron.com

OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE

São Paulo, SP, Brasil • 55.11.2101.6300 • www.omron.com.br

OMRON ARGENTINA • SALES OFFICE

Cono Sur • 54.11.4783.5300

OMRON CHILE • SALES OFFICE

Santiago • 56.9.9917.3920

OTHER OMRON LATIN AMERICA SALES

54.11.4783.5300

OMRON EUROPE B.V. • Wegalaan 67-69, NL-2132 JD, Hoofddorp, The Netherlands. • +31 (0) 23 568 13 00 • www.industrial.omron.eu

Authorized Distributor:

Automation Control Systems

- Machine Automation Controllers (MAC) • Programmable Controllers (PLC)
- Operator interfaces (HMI) • Distributed I/O • Software

Drives & Motion Controls

- Servo & AC Drives • Motion Controllers & Encoders

Temperature & Process Controllers

- Single and Multi-loop Controllers

Sensors & Vision

- Proximity Sensors • Photoelectric Sensors • Fiber-Optic Sensors
- Amplified Photomicrosensors • Measurement Sensors
- Ultrasonic Sensors • Vision Sensors

Industrial Components

- RFID/Code Readers • Relays • Pushbuttons & Indicators
- Limit and Basic Switches • Timers • Counters • Metering Devices
- Power Supplies

Safety

- Laser Scanners • Safety Mats • Edges and Bumpers • Programmable Safety Controllers • Light Curtains • Safety Relays • Safety Interlock Switches