

Warning! To avoid switch failure determine the actual load of the switch circuit and take steps to protect the switch from voltage spikes, current inrush and line/load capacitance using the following recommendations.


- Surges from coils, motors, contactors, solenoids and tungsten filaments. Transient
 protection, such as back-to-back zener diodes (Transorb) or an RC network, is
 recommended for such loads to ensure that maximum ratings of the switch are
 not exceeded.
- Line capacitance and load capacitance. An in-line resistor can be added in series immediately before the load to limit the inrush current. The resistor can only be added in series with the last wire just before the load. The voltage drop and the power rating of the resistor must also be calculated as follows:

Voltage drop = I \bullet R Watts = I² \bullet R (I = maximum continuous current of the load)

To verify switch operation with an ohmmeter:

Set range at 20 mega ohms (switches with triac output, set ohm range at 20 kilo ohms). For a normally open switch, the meter will read a high impedance with the actuator away. It will read very high to infinity range (triac switches will read high kilo ohm to infinity range) with the actuator within sense range. You will see the opposite reading for a normally closed switch.


Dimensions

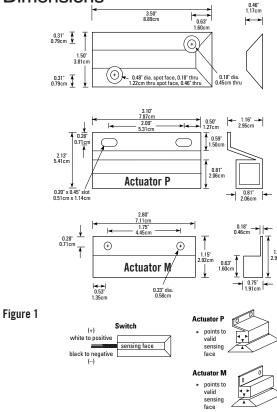

GuardSwitch[™] Series 100 Non-Contact Interlock/Position Switch

66		

	166-RN-06P
	166-RP-06P
	166-RP-12
	166-SN-06P
٦.	166

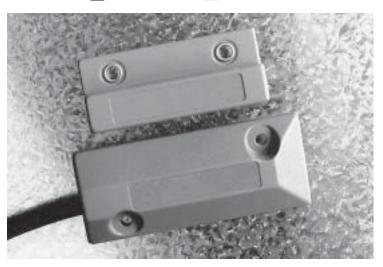

Installation

Use non-removable screws, bolts, or nuts to mount the switch and actuator. Do not over-torque mounting hardware.

- 1. Using the following guidelines, determine a suitable mounting location:
 - The switch and actuator must be within the listed sense range. See Ordering/ Electrical Specifications.
 - The actuator must be aligned with the switch—labels facing the same direction. (See Figure 1.)

Important: When mounting in proximity to ferrous material (steel), the sense range can be reduced 50% minimum depending on the shape and type of material. Test the switch in specific applications to determine the actual sense range.


- When mounting on a ferrous material (steel), a 1/4" nonferrous (plastic or aluminum) spacer may be used under the actuator and switch to restore most of the lost gap.
- When mounting on a hinged gate or door, mount the switch and actuator at least 6" away from the hinges to achieve the maximum movement.
- The switch and actuator must move in one of the approved directions. See Figure 2.
- The actuator can be mounted at a 90° rotation to the switch.
- The switch is polarity sensitive. Connect the white lead to positive and the black lead to negative.
- The switch is for DC loads only.

Buy: www.ValinOnline.com | Phone 844-385-3099 | Email: CustomerService@valin.com

- Do not mount for parallel actuation. An on-off-on signal may result when the actuator passes by the switch.
- 2. Mount the switch on the stationary frame of the machine and connect the electrical wiring. When mounting the switch on an ungrounded machine, connect the ground lead to one of the mounting screws.
- 3. Mount the actuator on the movable guard, door, or gate.

Mounting Configurations

Figure 2

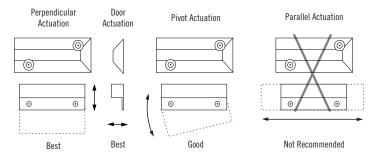

Three configurations are appropriate for interlock applications. The parallel actuation can result in on/off/on signal if the actuator passes by the switch rather than coming to rest in proximity to it. This is NOT a recommended configuration for interlock applications.

General Specifications

Enclosure	Epoxy-coated aluminum		
Temperature Range	-40°F to 180°F (-40°C to 80°C)		
Environmental	Hermetically Sealed Contact Switch		
	Sealed in Polyurethane		
NEMA Rating	1, 2, 3, 4, 4X, 5, 6, 12		
Protection Class	IP 67		
Response Time	1 msec		
Life Cycles	100,000 Under Full Load;		
	Up to 200,000,000 Under Dry Circuit		
Lead Types/O.D.	18/2 SJTOW (K)/0.30" (0.76cm)		
UL/CSA	All Models		

C FAL® US File E 122942



Ordering/Electrical Specifications

PART NUMBER	CONTACT ¹ Config.	LOAD RATING (DC)	SWITCHING VOLTAGE Maximum (DC)	SWITCHING CURRENT Maximum (DC)	VOLTAGE Drop	SENSE RANGE ² Nominal	BREAK RANGE Nominal	LEAD LENGTH Nominal
166-RM-01K	N.C.	100W	24V@4.0A	5.0A@20V	1.5V	1.6"(4.0cm)	2.1"(5.3cm)	1'(0.3m)
166-RM-06K	N.C.	100W	24V@4.0A	5.0A@20V	1.5V	1.6"(4.0cm)	2.1"(5.3cm)	6'(1.8m)
166-RM-08K	N.C.	100W	24V@4.0A	5.0A@20V	1.5V	1.6"(4.0cm)	2.1"(5.3cm)	8'(2.4m)
166-RM-12K	N.C.	100W	24V@4.0A	5.0A@20V	1.5V	1.6"(4.0cm)	2.1"(5.3cm)	12'(3.6m)
166-RP-06K	N.C.	100W	24V@4.0A	5.0A@20V	1.5V	1.9"(4.8cm)	2.4"(6.1cm)	6'(1.8m)
166-RP-12K	N.C.	100W	24V@4.0A	5.0A@20V	1.5V	1.9"(4.8cm)	2.4"(6.1cm)	12'(3.6m)
166-RN-01K	N.C.	100W	24V@4.0A	5.0A@20V	1.5V	Switch Only	Switch Only	1'(0.3m)
166-RN-06K	N.C.	100W	24V@4.0A	5.0A@20V	1.5V	Switch Only	Switch Only	6'(1.8m)
166-SN-06K	N.O.	100W	24V@4.0A	5.0A@20V	1.5V	Switch Only	Switch Only	6'(1.8m)
166-P	Actuator P On	ıly						
150-Z	Actuator M Or	nly						

Warning- Each electrical rating is an individual maximum and cannot be exceeded!

Note: This switch cannot be used for AC applications. In DC applications it is polarity sensitive white to positive, black to negative.

 $1 \quad \mbox{Configuration with actuator away from the switch}$

Proximity of ferrous materials usually reduces sense range — typically by 50%. The shape and type of material cause a wide diversity of effects. Testing is required to determine actual sense range for specific applications.