# **LED Bar Light** INSTRUCTION MANUAL [ Model : CWA ]

Thank you for purchasing the LED Bar Light for your application. Prior to installation, please read through this manual for proper installation and precautionary steps. In addition, please store this manual for future reference when performing maintenance, repairs or inspections. If you have any questions regarding this product, please contact our PATLITE Sales Representative.

## Safety Precautions

In order to prevent any damage to the user and other personnel or to assets, note the

◆The following symbols classifies the following precautions into two catagories and explains the level of harm inflicted when caution is disregarded while using this product.

injury"

Displays the warning "Failure to follow warning may lead to death or severe

♠ Caution

Displays the warning "Failure to follow caution may lead from light to medium injury or may lead to property loss or injury to others".

The following symbols indicate and explains the nature of the information to be observed.

This symbol indicates "Prohibited", which should not be carried out by all means

This symbol indicates "Enforced", which should be observed and carried out by all means.

### 1. For safe application, observe the following:

### 



 Do not disassemble or modify this product. Failure to comply may result in electric shock or fire.

[Prohibited]

After installing this product, be careful not to use this product to climb onto a machine, or to get anything snagged onto this product while it is mounted on equipment, etc. Failure to comply may result in falling off the machinery or product damage may occur.



- Be sure to disconnect the power when wiring, mounting, exchanging, or repairing the product. Failure to comply may result in damage of the internal circuitry and the danger of electric shock due to short-circuiting.
- Request the installation and wiring to be accompanied by a professional contractor. Failure to comply may result in electric shock, fire, or falling from high places.
- When this product is used for security purposes, it should be inspected daily, and to be used in conjunction with other security products, in case a malfunction should occur.
- Verify the installation location is a firm location which can handle the weight of the product and has no adverse vibrations. If installed in a place where vibration is frequent and/or exceeds the specifications, damage to the product may occur.
- The designated screws should be used for installation. Any parts used that are not specified may result in product damage or personal injury.

#### ♠ Caution




- In order to avoid danger to the eyes, do not stare into the beam, do not view directly into the optical instrument, and don't turn the beam towards someone's eyes. The LED beam is hazardous to the eyes.
- Do not loosen any body screws. It will have an adverse effect on the protection rating.




- Verify that the specified operating voltage is not exceeded.
   For safety measures, be sure to connect an external fuse to protect from overcurrents or overvoltages from mis-wiring, etc. The product can be protected by short-circuiting due to mis-wiring and overcurrents or overvoltages which can damage it.
- Avoid installation in the following locations:
  - Near space heaters or places where high temperatures are present.
  - · In locations where chemical or explosive gasses, etc., are present.

#### 2. Model Number Configuration

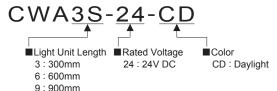

#### 3. Part Names and Dimensions

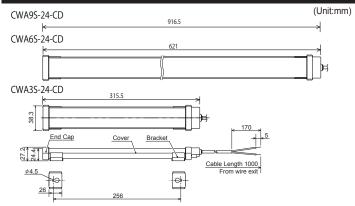

#### 4. Installation

## Warning Warning



- Do not modify or disassemble the product. Failure to comply may result in electric shock or fire
- [Prohibited] After installing this product, be careful not to use this product to climb onto a machine, or to get anything snagged onto this product while it is mounted on equipment, etc. Failure to comply may result in falling off the machinery or product damage may occur.



- To prevent from electrocution, disconnect power prior to mounting or performing maintenance.
- [Enforced] Verify the installation location is a firm location which can handle the weight of the product and has no adverse vibrations. If installed in a place where vibration is frequent and/or exceeds the specifications, damage to the product may occur.
  - The designated screws should be used for installation. Any parts used that are not specified may result in product damage or personal injury.


#### ♠ Caution




- Ensure this product is securely mounted, to prevent from falling, etc.
  This product is for indoor use only. (Not for outdoor use)
  Use protection to secure the standard bracket when mounting in a
- vertical direction. ■ Installation Procedure (use Bracket)

Install the bracket on a sturdy surface with M4 screws. After the bracket is mounted to a sturdy surface, snap the main unit into

· CWA3S

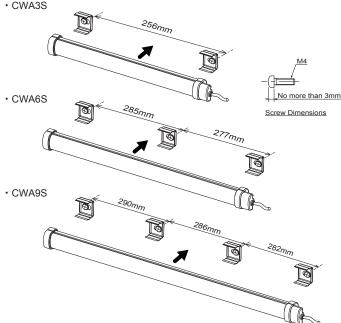

■ Installation Procedure (use Holding bracket\*) Install the holding bracket in the main unit, install on a sturdy surface with

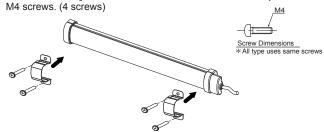

### 5. Wiring and Proper Use

## / Warning



 Be sure to disconnect the power when wiring, mounting, exchanging, or repairing the product. Failure to comply may result in damage of the internal circuitry and the danger of electric shock due to short-circuiting.

## <u>∕</u> Caution




Check that the proper voltage is connected before applying power. Do not pull on the cable, or try to push it inside the unit.

Possible cause of failure may occur. In addition, allow a margin of [Enforced]

 Slack for the wire and cable to prevent stress.
 Use a constant-voltage regulated power supply. Possible cause of failure may occur with the use of a constant current power supply.
 Install a fuse to protect it from the power supply. The product can be protected by short-circuiting due to mis-wiring and overcurrents or expectations which can demand it. overvoltages which can damage it.

#### ■ Wiring Example

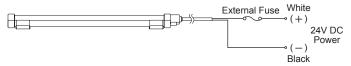

\* Use an external fuse rated for the machine, which is connected to the product, to protect the machine from damage


### ♠ Caution



The protection rating does not include the cable ends. If the ends of the cable are in contact with water or exposed to dew or condensation, refer to the indications below to dress the cable ends for water and oil resistance.

Connect the wire ends in a location which will not expose the ends to water or oil.

Use Fillers, such as silicon, etc., to seal the cable ends. Refer to the circled part of the figure below for the sections requring protection from water and/or oil intrusion.

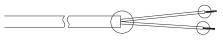

#### How to Use

Connecting the white wire (+) to positive and black wire (-) to the negative and applying a 24V DC supply will turn the LED light on.

#### 6. Maintenance and Inspection

If the product does not work after referring to the table below, please request for repair. In addition, if there are any questions concerning this product, feel free to contact your PATLITE Sales Representative.

Problem	Where to Check	What to Do
		Verify the voltage has been connected.
Does not	properly	Verify the proper polarity.
light up		Verify the proper voltage is supplied. (24V DC)
J	supplied?	Verify the external fuse has not been burned-out.

#### 7. Specifications

Model	CWA3S-24-CD	CWA6S-24-CD	CWA9S-24-CD		
Luminous Color	Daylight				
Color Temperature (Typ.)	6500K				
Illuminance (at 24V DC, 0.5m)	440lx	800lx	990lx		
Total Luminous Flux	350lm	700lm	1050lm		
Rated Voltage	24V DC (Polarized)				
Operating Voltage	24V DC ±10%				
Current Consumption	180mA	360mA	540mA		
Operating Temperature Range	-30 $^{\circ}$ C $^{\circ}$ C +60 $^{\circ}$ C (RH90% or less, no condensation)				
Main Body Material	Polycarbonate Resin (Waterproof Packing: Silicon)				
Protection Rating	IP65 (Cable connector ends not included)				
Mounting Location	Indoor Only				
Mounting Direction	Any Direction				
Insulation Resistance	500V DC 5MΩ or more				
Withstand Voltage	500V AC for 1 minute (Between power terminal and screw)				
Vibration Resistance	30Hz 19.6 m/s² (Back and Forth, Up and Down, Left and Right for 2 hrs. each)				
Mass	215g ±10%	385g ±10%	540g ±10%		

#### CAUTION

- Specifications and dimensions may change without prior notice for improvements, etc.
- Due to the characteristics of the LED, color temperature, brightness and hue will differ for evey LED and every product.
- Since all IP examinations are done according to specified conditions and regulated time, the protection rating is not guaranteed for an extended period
- The environmental condition for UL authentication is at the operating ambient air temperature of 25 ℃.

### **PATLITE** Corporation

•	<u> </u>
International Division Sales & Marketing Department Inaba Denki Sangyo Building 2F,4-11-14, Itachibori, Nishi-ku, Osaka, Japan 550-	TEL. +81-6-7688-5400 -0012 FAX. +81-6-7688-5401
PATLITE (U.S.A.) Corporation	TEL. +1-310-328-3222
20130 S. Western Avenue, Torrance, CA 90501 U.S.A.	FAX. +1-310-328-2676
PATLITE Europe GmbH	TEL. +49-811-99819770-0
Am Soeldnermoos 8, D-85399 Hallbergmoos, Germany	FAX. +49-811-99819770-9
PATLITE (SINGAPORE) PTE LTD	TEL. +65-6226-1111
No.2 Leng Kee Road, #05-01 Thye Hong Centre, Singapore 159086	FAX. +65-6324-1411
PATLITE (CHINA) Corporation	TEL. +86-21-6630-8969
Room 512, Jufeng Business Building, No.697-3 Lingshi Road, Shanghai 200072, China	FAX. +86-21-6630-8938
PATLITE KOREA CO., LTD.	TEL. +82-2-523-6636
A-2603, Daesung D-POLIS, 543-1 Gasan-dong, Geumcheon-gu, Seoul, 153-719 Korea	FAX. +82-2-861-9919
PATLITE TAIWAN CO., LTD.	TEL. +886-2-2555-1611
7F. No. 91, Huayin St, Datong District Taipei, Taiwan R.O.C	FAX. +886-2-2555-1621