



FiberFlo® MicroFiber Filters

Unique Manufacturing Process Gives Superior Structure

Using a numerically controlled process, molten polypropylene is extruded into highly porous cartridges. The microfibers weld together as they cool. The result is a dimensionally stable filter media that resists distortion during increased fluid pressure.

True Gradient Pore Size Distribution



FiberFlo MicroFiber cartridges contain void spaces that are far more accessible to dirt particles than those filters using graded density construction. The proprietary melt blown process develops a filter with enormous quantities of progressively smaller pores without significantly increasing bulk density. Porosity remains uniform, from coarse to fine, throughout the cartridge wall providing maximum throughput and extended service life. In contrast, graded density is a relatively unsophisticated method that compresses more fiber into a fixed volume to achieve smaller voids and pores. This can cause a dramatic reduction in percentage of void volume resulting in excessive pressure drop and shortened service life.

Free From Extractables

FiberFlo MicroFiber filter surfaces are free from lubricants, surfactants or antistatic chemicals so they will not cause foaming or other contamination. Polypropylene microfiber is suitable for potable water filtration and food processing applications. The polypropylene cartridges are also suitable for filtering a variety of industrial chemicals.

Features & Benefits

- Greater void volume than resin bonded or wound cartridge.
- Homogeneous high purity media. Fibers free of residual extrusion oils, surfactants, antistatic agents and resin binders.
- Fibers thermally bonded - dimensionally stable filter media.
- Increased dirt-holding capacity. Longer service life. Lower initial pressure drop.
- Hydrophobic media.
- High efficiency media.
- Easily ground into powder or incinerated.
- Reduced fiber migration. Micron rating not altered as differential pressure increases. Rigid, highly porous cartridge does not require a support core.
- Results in particle entrapment throughout depth of media reducing surface blinding and increasing dirt holding capacity.
- Filter will absorb undissolved and non-emulsified oil out of liquid, air or gas streams.
- Reduced waste volume.

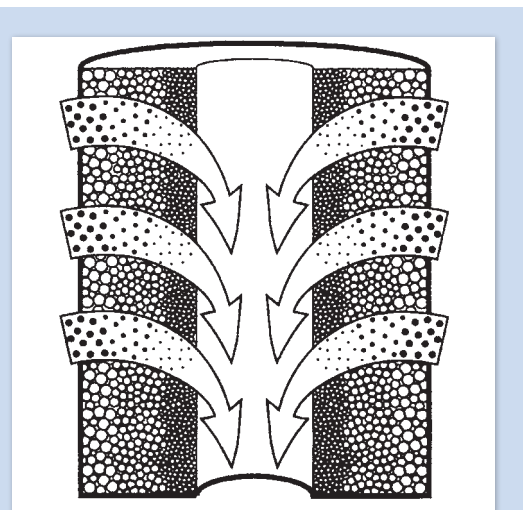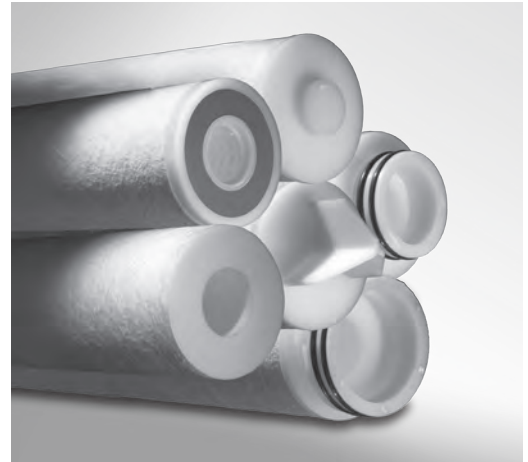

The true gradient density of these filters results in particle entrapment throughout the depth of the media, reducing surface blinding and providing increased filter life and dirt holding capacity.

Technical Data

FiberFlo MicroFiber Cartridge Specifications	
Differential Pressure	
Maximum Recommended:	35 PSIG
Change Out:	15 PSIG
Initial:	1-3 PSIG
Operating Temperature	
Maximum	200°F
Lengths (in inches)	
9 ¾, 10, 19 ¾, 20, 29 ¼, 29 ¾, 30, 40	
O-Ring or Flat Gaskets	
Silicone, VITON®, Buna-N, ERR, Neoprene	
Micron Ratings	
1, 3, 5, 10, 25, 50, 75, 100, 150	

End Fitting Options:	
Description	Std. Reference
SOE-222 O-Ring/Solid End Cap	Code 3
SOE-222 O-Ring/Fin	Code 8
SOE-226 O-Ring/Fin	Code 7
DOE-Flat Gasket/Flat Gasket	Code DOE
DOE -Standard (X Model)	No end caps

Compliance of Polypropylene MicroFiber Cartridges

FDA

The polypropylene microfiber media, using a base homopolymer resin, is in compliance with the appropriate guidelines outlined by the U.S. Food and Drug Administration. Construction components meet the FDA requirement outlined in the Code of Federal Regulations, Title 21, Section 177.1520 (a), (1) and Section 177.1520 (c), (1.1). Guidance in the proper use of polymers is set forth by appropriate government regulation and must be determined by the end user. End users are encouraged to consult the Code of Federal Regulation in determining acceptable use for polypropylene homopolymers (Ref...Title 21, Section 176.170).

NSF

FiberFlo MicroFiber Cartridges, with and without end caps, are certified by NSF International under ANSI/NSF Standard 42 for replacement parts.

USP

FiberFlo MicroFiber Cartridges meet the requirement of the USP Class VI plastics test as demonstrated by USP Biological Reactivity Tests, In Vivo.

VITON® is a registered trademark of E.I. du Pont de Nemours and Company or its affiliates.
FIBERFLO® is a registered trademark of Minntech Corporation, a Cantel Medical Company



Mar Cor Purification
4450 Township Line Road
Skippack, PA 19474-1429
Tel: (484) 991-0220
Toll Free: (800) 346-0365
Fax: (484) 991-0230

Mar Cor Purification
14550 28th Avenue North
Plymouth, MN 55447
Tel: (484) 991-0220
Toll Free: (800) 633-3080
Fax: (763) 210-3868

Mar Cor Purification
3250 Harvester Road - Unit 6
Burlington, ON L7N 3W9
Tel: (905) 639-7025
Toll Free: (800) 268-5035
Fax: (905) 639-0425

Mar Cor Purification
Sourethweg 11
6422 PC Heerlen
The Netherlands
Tel: (+31) 45 5471 471
Fax: (+31) 45 5429 695

Mar Cor Purification
1A International Business
Park, #05-01
Singapore 609933
Tel: (+65) 6227 9698
Fax: (+65) 6225 6848